



* Model		Thread Size
LSTS		16 x 1
LSTL		20 x 1

To Align Sensor using Laser Sighting Tool

1. Screw LST onto front of sensor
2. Push button 'A' to turn on laser
N.B. BE CAREFUL NOT TO AIM LASER DIRECTLY OR INDIRECTLY (VIA REFLECTIONS) INTO ANYONES EYES
3. Align sensor and lock in place
4. Push button 'A' to turn off laser
5. Unscrew LST from front of sensor

To Change Battery

1. Unscrew two halves of LST
2. Remove battery
3. Replace battery with Lithium 1/2 AA 3.6V battery
4. Reassemble LST

All Dimensions in mm

ISSUE	DESCRIPTION	APPD	DATE	MATERIAL	AL ALLOY 2011 - T3	DRAWING NUMBER	01161
01	New Design	RL	12/08/09	FINISH	CLEAR ANODISED	TITLE	Laser Sighting Tool (LST)
				TOLERANCE	ANGULAR 0.1 LINEAR 0.1	PROJECTION	
				NOT TO SCALE	SHEET 1 OF 1		

